

# DustSensor - MANUAL



## Legacy product

This product is no longer available. The documentation is still available as an archive.

ORDER-CODES:

KDS01

[Quick Start Manual](#)

## Overview

The DustSensor measures dust and dirt deposits on a surface on an optical basis and can be connected to all Kentix devices with SystemPort (SiteManager (appliance), AlarmManager, MultiSensor (Ethernet) and AccessManager (wireless)) directly and without an external power supply. The installation is carried out on surfaces on which increased dust-dirt deposition is to be expected, e.g. floors of IT racks, raised floors in data centers.

## Safety instructions

### Installation

Installation and commissioning may only be carried out by trained specialist personnel in accordance with the instructions.

No modifications of any kind, other than those described in an appropriate manual, are permitted to Kentix GmbH products.

Certain levels of protection must be provided when installing Kentix equipment.

Observe the relevant regulations for installations in the respective environment.

Only operate the products within the defined temperature range.

The instructions should be passed on to the user by the person carrying out the installation.

Kentix accepts no liability for damage to the equipment or components resulting from incorrect installation. No liability is accepted for incorrectly programmed units.

Kentix shall not be liable in the event of malfunctions, damage to property or other damage.

### Use of the products, transport and storage

Protect the device during transport, storage and operation from

Protect moisture, dirt and damage.

### Battery powered products

Do not use products in potentially explosive atmospheres.

Only operate the products within the defined temperature range.

Installation and battery replacement may only be carried out by trained personnel in accordance with the instructions.

Do not charge, short circuit, open or heat batteries.

When inserting the batteries, pay attention to the correct polarity.

The devices must always be operated with the batteries intended for the product.

When changing batteries, always replace all batteries.

Dispose of old or used batteries properly.

Keep batteries out of the reach of children.

### Maintenance


Kentix devices must be checked for functionality as part of annual maintenance.

### Disposal

Electrical appliances and batteries must be disposed of separately from household waste.

## Controls


### Front view

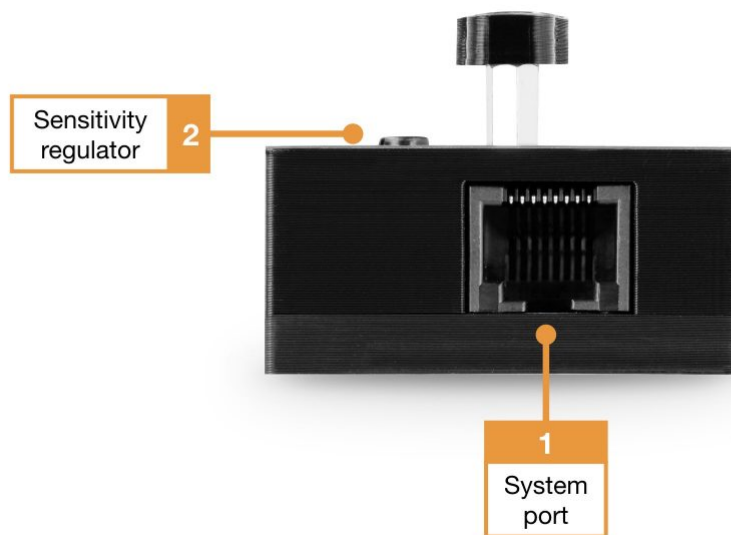


#### KDS01 Front view

1. Kentix SystemPort: For connection to AlarmManager or MultiSensor via standard patch cable
2. Positioner for the sensitivity (Low-High)

#### **Top view**

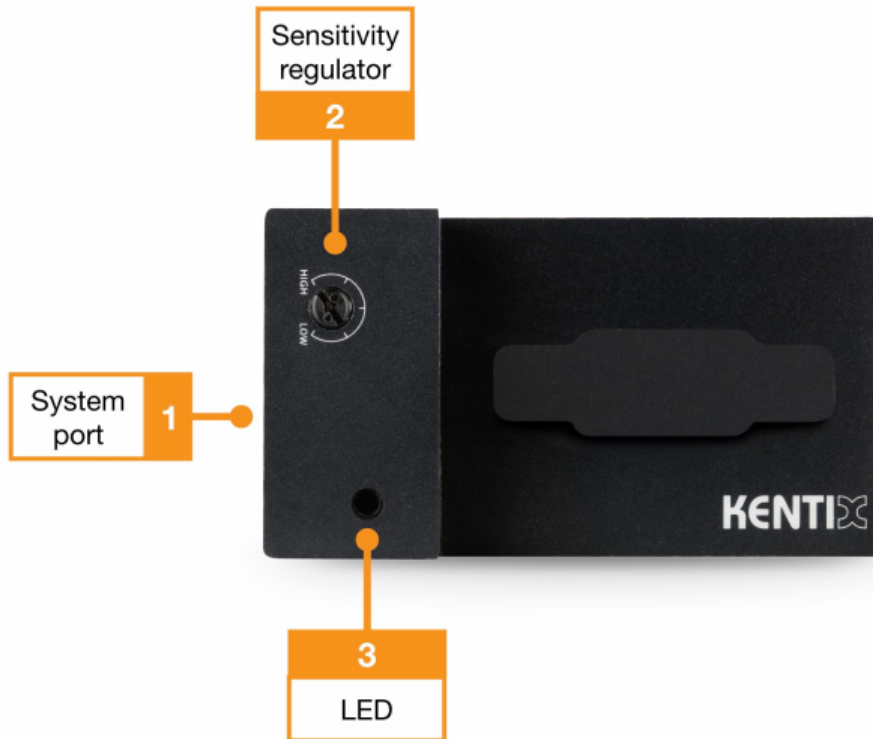

KDS01 Top view

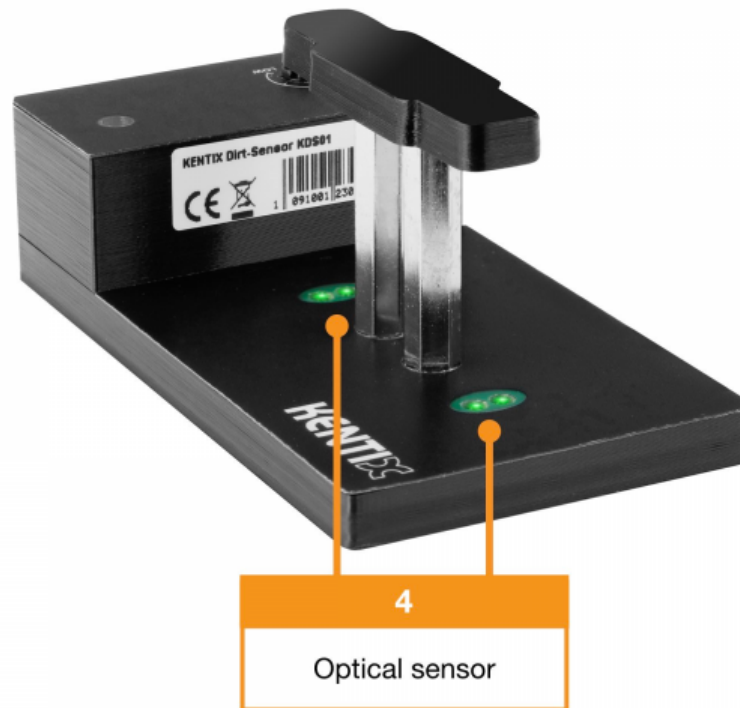

#### KDS01 View Sensors

1. Kentix system port: For connection to AlarmManager or MultiSensor via standard patch cable
2. Positioner for the sensitivity (Low-High)
3. Status LED
  - GREEN:** POWER OK, no alarm pending
  - RED:** POWER OK, alarm pending
4. Optical sensors, dust-dirt detection is performed by both sensors

## Connection of extensions at the system port

Additional system components such as leakage sensors, door contacts or external alarms from UPS or air conditioning units can be connected via the Kentix system port. The system port has 2 digital inputs and 2 digital outputs which are available via a RJ45 socket.


An extension module (ORDER CODE: KIO3) is required to connect external alarms. Above this, 2 potential-free contacts and 2 changeover relays can be wired.

A commercially available network patch cable (unshielded/shielded) with a length of up to 20 m can be used as the cable connection between the Kentix system port and the system component.

The Kentix system port is not a network port. Avoid connecting to network ports, especially PoE devices. The port is a Kentix specific expansion port and is only expandable with components designed for it.

Pins 4/5/8 are only enabled for internal use and must not be wired.

The assignment of the system port

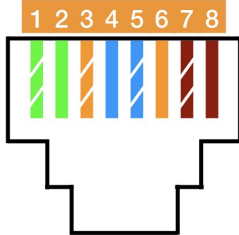
System port (type: RJ45)	Assignment of the contacts
	<ol style="list-style-type: none"> <li>1. internal system voltage (GND) - Not for external <b>use*</b>.</li> <li>2. output 1 (open collector, max. 100mA)</li> <li>3. output 2 (open collector, max 100mA)</li> <li>4. external voltage / BUS (depending on device type)</li> <li>5. external voltage /BUS (depending on device type)</li> <li>6. input 1 (potential-free circuit)</li> <li>7. input 2 (potential-free circuit)</li> <li>8. internal system voltage (5/24VDC) - not for external <b>use*</b></li> </ol> <p><b>* These connections are for internal use only</b></p>

Kentix system port assignment

## Connection

The DustSensor is connected to the SystemPort of the remote station using an RJ45 patch cable. Power supply and alarming is done directly via the SystemPort.

The dust sensor and the alarm behavior are configured via the integrated web server of the main device. Assign a suitable designation such as "Dust alarm" for the external alarm input 2 via the remote station configuration. The alarm logic must be set to "Alarm when open".

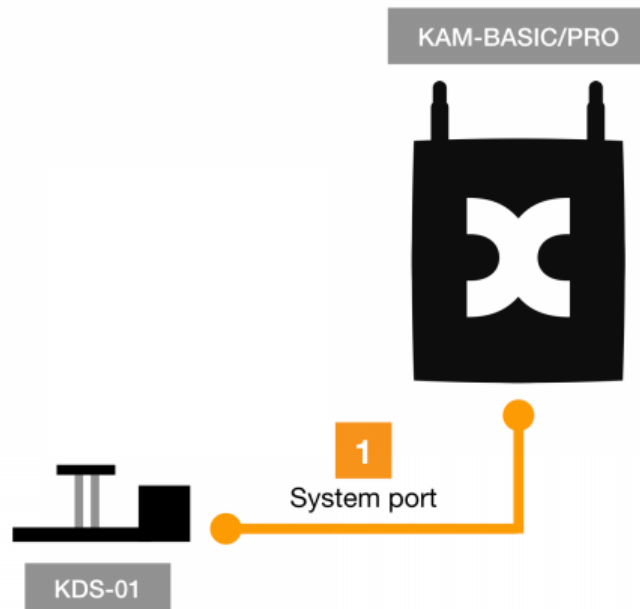

A maximum distance of 50 meters can be bridged between the dust sensor and the remote station. At greater distances, signal loss is to be expected!

## Adjusting the sensitivity

High	Medium	Low
		
If the sensor is set to a high sensitivity, it will detect even a small amount of contamination.	The medium setting is a good basic setting that fits well for most applications. Typical levels of contamination in the IT cabinet are detected here.	With this setting, only coarser contamination is reported. This should be chosen for areas that get dirty quickly and heavily.

After triggering, the sensor can be cleaned with a slightly damp cloth and the dust traps are replaced. The medium setting should be selected for a typical IT rack. A good indication of the different levels of contamination is the legibility of the Kentix lettering on the sensor.

## Sensor with attached dust traps

The dust catchers (transparent adhesive foil) are included with the sensor. These are bonded directly to the sensors and produce permanent dust adhesion and higher sensitivity. Deise are especially helpful in environments with high air turnover.



The top is then peeled off and the following effects are created:

1. The dust adhesion is increased by the double-sided adhesive film
2. The sensitivity of the sensor is doubled

## Mounting

The installation is typically carried out on surfaces where increased dust-dirt deposition is to be expected, e.g. floors of IT racks, raised floors in data centers. A magnetic tape is attached to the underside of the sensor. This allows the sensor to be easily fixed to the surface to be monitored. Select an area as an assembly site where the most dust/dirt accumulation occurs or is expected. After triggering due to contamination, the sensor can be cleaned again with a slightly moistened cloth. The dust catchers can also be replaced after triggering.



Mounting example on the base plate of an IT rack