

# How to configure KentixONE for access with a DNS name?

To enable smooth access to a Main device or a satellite by means of an assigned DNS name, an entry for this name is required in the network settings of the device.

First open KentixONE using the IP address.

Add the configured DNS name for the device in the settings **Network -> Settings -> Additional allowed addresses**. (e.g. **alarmmanager.local**)

**Network Settings**

☐ DHCP ☒ Manually

**IP Address**  
192.168.178.105  
Please enter the IP Address

**Subnet Mask**  
255.255.255.0  
Please enter the Subnet Mask

**Gateway**  
192.168.178.1  
Please enter the Gateway

**DNS Server 1**  
192.168.178.1  
Please enter the DNS-Server 1

**DNS Server 2**  
192.168.100.1  
Please enter the DNS-Server 2

**Additional permitted Addresses**  
enter DNS here  
If you're using another IP address to control your Manager, e.g. outside your network with ...

**MAC Address**  
70:82:0e:12:b6:3f

**Host Name**  
kentix-70820e12b63f.local

If you're using another IP address to control your Manager, e.g. outside your network with DynDNS, you may enter here this address to permit it. You may also provide more addresses separated by comma.