

SD card

The SD card is used as a storage location for backups, software versions or, in the SmartAccess area, for the images captured by the cameras.

This menu item displays information such as free and used memory space on the SD card. The SD card can also be reset (delete the contents of the SD card).

Before resetting the SD card, it is recommended to copy the data to an external storage medium.