


# Wall reader (bus) DoorLock-WA7-V2 - MANUAL

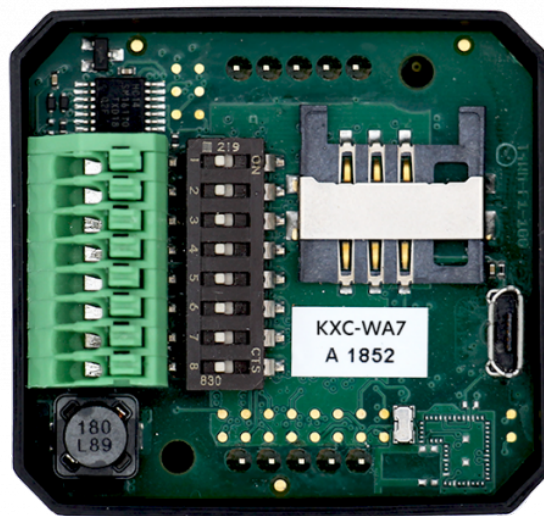

## ORDER-CODES:

[KXC-WA7-IP1-V2](#), [KXC-WA7-IP2-V2](#)

[Datasheet KXC-WA7-IPx-V2](#)

## Overview

Kentix IP wall readers enable contactless control of doors with a MIFARE® DESFire® RFID chip. The wall reader is suitable for installation in intercom systems or behind front panels. The reader's electronics are housed in a 23 mm high casing. The setup always consists of the actual wall reader and the connected Kentix [AccessManager](#). The wall reader is connected to the AccessManager via a 4-wire connection. The AccessManager itself connects directly to a Power over Ethernet (PoE) capable network switch. To control electric strikes/motor locks, the SmartRelay offers two relay outputs and, depending on the power class of the strikes, an integrated PoE splitter with 24VDC output.

For the operation of the wall readers (version: V2), a Kentix AccessManager for cable

readers (KXP-2-RS) with a KentixONE software version of 8.2.0 or higher is required. Information about the relay and **circuit diagrams including examples** can be found here: [AccessManager \(Bus\)](#)

## Safety instructions

### Installation

Installation and commissioning may only be carried out by trained specialist personnel in accordance with the instructions.

No modifications of any kind, other than those described in an appropriate manual, are permitted to Kentix GmbH products.

Certain levels of protection must be provided when installing Kentix equipment.

Observe the relevant regulations for installations in the respective environment.

Only operate the products within the defined temperature range.

The instructions should be passed on to the user by the person carrying out the installation.

Kentix accepts no liability for damage to the equipment or components resulting from incorrect installation. No liability is accepted for incorrectly programmed units.

Kentix shall not be liable in the event of malfunctions, damage to property or other damage.

Use of the products, transport and storage

Protect the device during transport, storage and operation from

Protect moisture, dirt and damage.

Battery powered products

Do not use products in potentially explosive atmospheres.

Only operate the products within the defined temperature range.

Installation and battery replacement may only be carried out by trained personnel in accordance with the instructions.

Do not charge, short circuit, open or heat batteries.

When inserting the batteries, pay attention to the correct polarity.

The devices must always be operated with the batteries intended for the product.

When changing batteries, always replace all batteries.

Dispose of old or used batteries properly.

Keep batteries out of the reach of children.


Maintenance

Kentix devices must be checked for functionality as part of annual maintenance.

Disposal

Electrical appliances and batteries must be disposed of separately from household waste.

## Controls

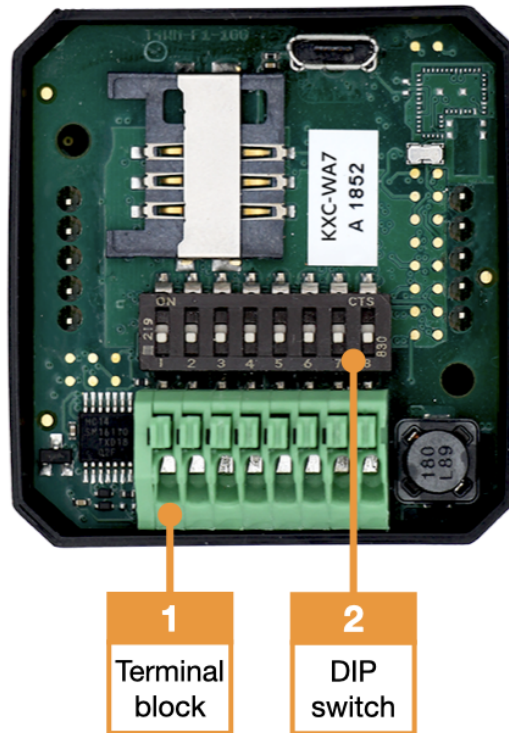

1. Connection terminal
2. DIP switch

### Connection terminal

| Terminal #<br>Reader | Function<br>Reader | Terminal #<br>AccessManager |
|----------------------|--------------------|-----------------------------|
| 1                    | -                  | -                           |
| 2                    | -                  | -                           |
| 3                    | RS-485 A           | 6 (BUS A)                   |
| 4                    | RS-485 B           | 5 (BUS B)                   |
| 5                    | -                  | -                           |
| 6                    | -                  | -                           |
| 7                    | 12 - 30 VDC (+)    | 3 (+)                       |

| Terminal #<br>Reader | Function<br>Reader | Terminal #<br>AccessManager |
|----------------------|--------------------|-----------------------------|
| 8                    | GND (-)            | 4 (-)                       |

KXC-WA7-IPx-V2 Connection terminal

## DIP switch


| DIP | Function                                      | Standard settings |
|-----|---|-------------------|
| 1   | -   | -                 |
| 2   | -   | -                 |
| 3   | -   | -                 |
| 4   | -   | -                 |
| 5   | RS-485 BIAS ON/OFF                            | OFF               |
| 6   | -   | -                 |
| 7   | -   | -                 |
| 8   | Termination 120 Ohm<br>(terminating resistor) | OFF               |

KXC-WA7-IPx-V2 DIP switch


**Important!** Wall readers of different versions (V1, V2 ) cannot be operated on one AccessManager. The version identifier (e.g. V2) is coded in the article number.

**For the operation of the wall readers with version 2 (V2), the connected AccessManagers requires at least the KentixONE version 8.2.0**

## Dimensions

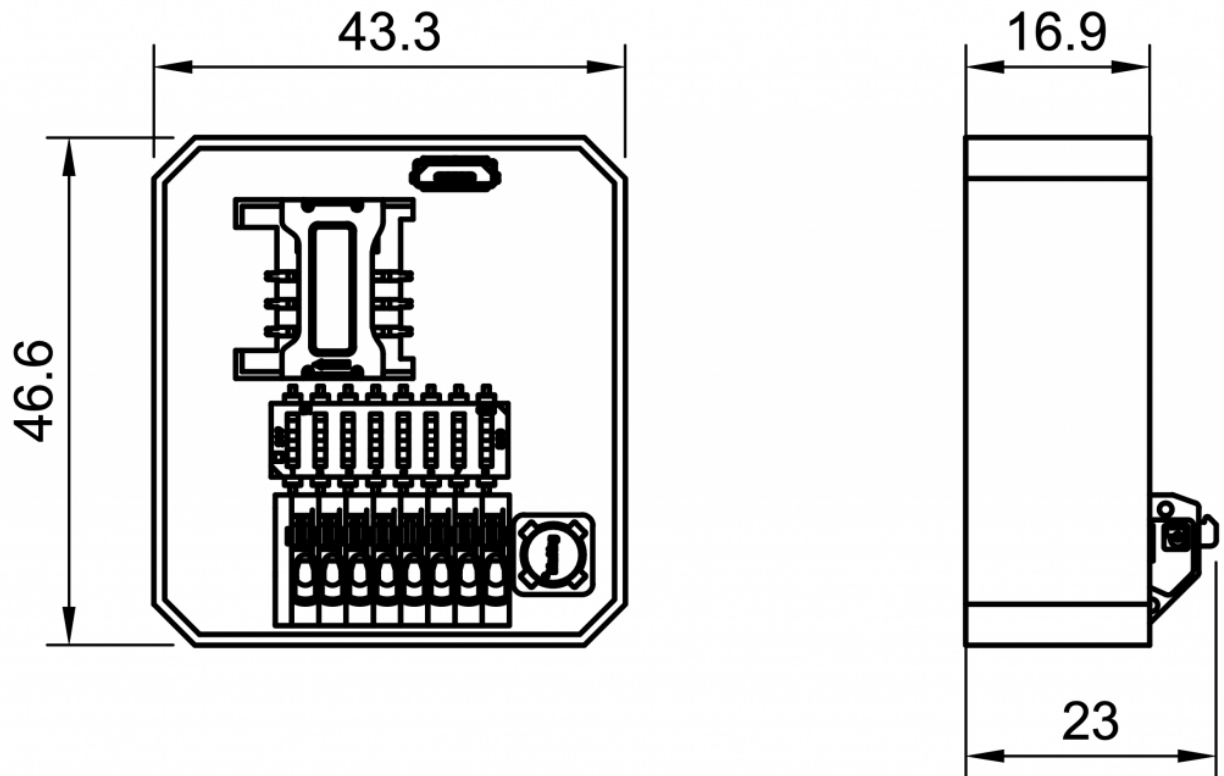

### Connection example

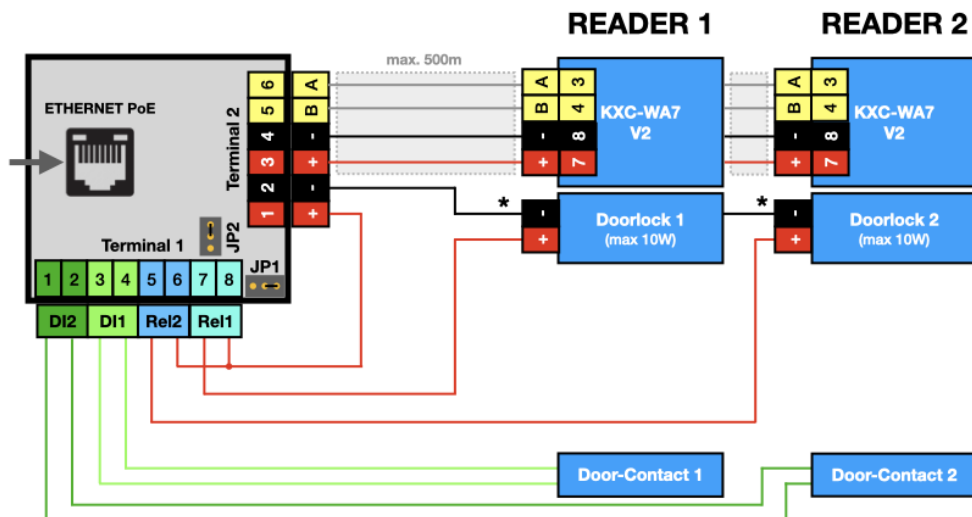

The connection example schematically shows the wiring of two DoorLock-WA7 with door contacts and external electric strikes to an AccessManager.

Terminal 2 on the AccessManager provides communication via the data bus and the supply of operating voltage for the wall readers. (terminals 3-6). Terminal 2 serves as a common potential for the power supply of door openers with the PoE supply voltage of the AccessManager.

Terminal 1 is used for connection of potential-free contacts (“door contacts”, terminals 1-4) and switching of door openers by relay 2 (5-6) and relay 1 (7-8). Relay 1 and 2 switch terminal 1 to terminal 2 to common potential (terminal 2, terminal 2).


### Commissioning two wall readers on one AccessManager

If two wall readers are to be operated with one AccessManager, proceed as follows for commissioning:

Connect the first wall reader to the AccessManager. Add it in the main device with “DoorLock (IP)”. Once the first WallReader has been successfully added, disconnect it temporarily from the AccessManager to connect the second WallReader and add it as well. Once both devices have been successfully registered, reconnect the first WallReader to the

AccessManager and then put both devices into operation together.

### Installation example

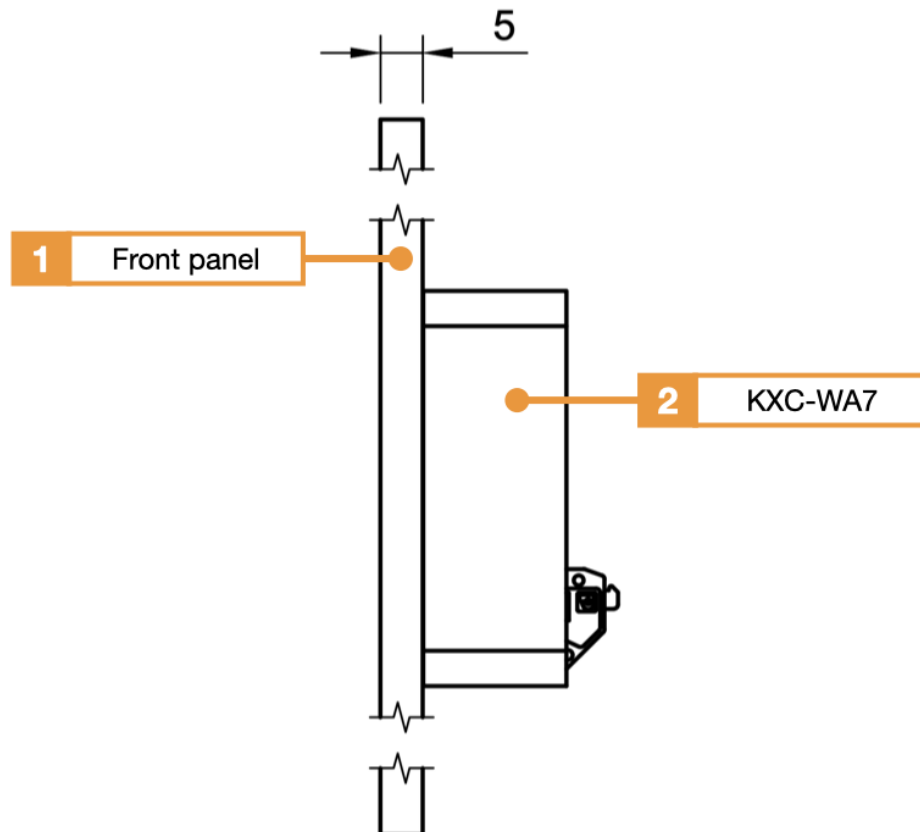

1. Front panel (maximum thickness 5mm)
2. DoorLock-WA7

The DoorLock-WA7 can be mounted in intercom systems or behind front panels using the adhesive pads supplied. The reading range of the DoorLock depends on the material of the front panel and other environmental influences. The material thickness of the front panel must not exceed 5 mm.

### Signaling

| Function               | Signal and explanation |
|------------------------|------------------------|
| Wall reader is offline | LED flashes magenta    |

|                                 |   |
|---------------------------------|---|
| Access granted                  | short tone, LED flashes green                   |
| Door is opened by time profiles | LED lights up permanently green                 |
| Access denied                   | short tone, LED flashes red                     |
| Zone is armed                   | 3 long tones, simultaneously LED flashes 3x red |
| Arming not possible             | long tone, LED flashes red                      |

Table signaling