


Wie kann ich das SMS-Gateway eines AlarmManagers/SiteManagers (mit GSM) von einem SiteManager/Docker (ohne GSM) über die API ansprechen?

Wenn Sie als Main-Gerät einen SiteManager oder Docker Container ohne integriertes GSM-Modem betreiben und in Ihrem System zusätzlich ein AlarmManager/SiteManager mit GSM-Modem zur Verfügung steht, kann als weiterer Meldeweg eine SMS-Alarmierung über Webhooks und API realisiert werden.

1. Aktivieren Sie im AlarmManager das SMS-Gateway unter **Konfiguration -> GSM** und vergeben Sie ein Passwort für das Gateway

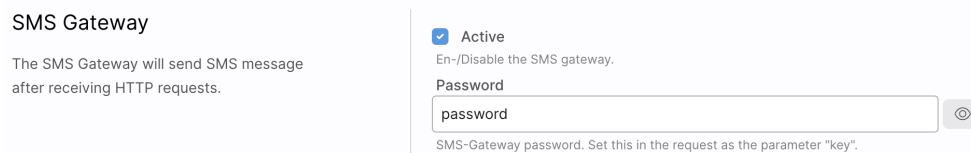

SMS Gateway


The SMS Gateway will send SMS message after receiving HTTP requests.

Active
En-/Disable the SMS gateway.

Password
password

SMS-Gateway password. Set this in the request as the parameter "key".

2. Kopieren Sie im AlarmManger das API-Token eines Administrators

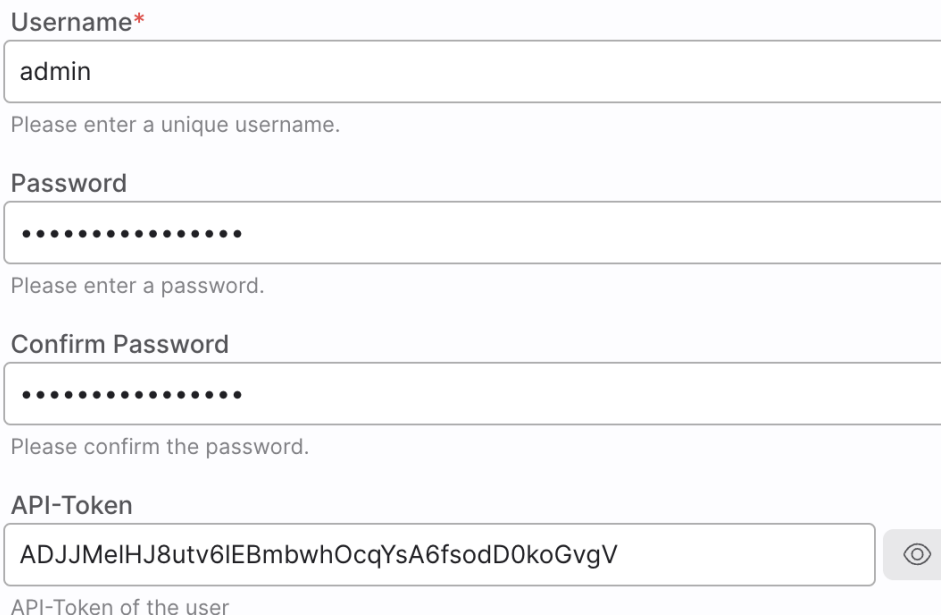

Username*

admin

Please enter a unique username.

Password

.....

Please enter a password.

Confirm Password

.....

Please confirm the password.

API-Token

ADJJMeIHJ8utv6IEBmbwhOcQYsA6fsodD0koGvgV

API-Token of the user

3. Im SiteManager legen Sie einen Webhook mit der Methode **PUT** und folgender Ziel-Url an **https://<IP AlarmManager>/api/sms-gateway**
4. Als Authentifizierung wählen Sie **Bearer Token** und tragen das API-Token vom AlarmManager ein
5. Für den Inhalt des Webhooks wählen Sie JSON-Format

6. Als Inhalt konfigurieren Sie folgenden JSON-Code

```
{
  "key": "password",
  "recipients": [
    "+491751209712", "+4915753654543"
  ],
  "body": "In der Zone $GROUP_NAME$ ist beim Sensor $DEVICE_NAME$ ein $ACTIVE_ALARM_SENSOR_NAME$-Alarm aufgetreten, Messwert: $ACTIVE_ALARM_MEASUREMENT_VALUE$"
}
```

Den konfigurierten Webhook ordnen Sie nun allen gewünschten Alarmgruppen zu, so dass dieser bei einem Alarm ausgeführt wird.

Webhook Configuration

Webhooks are HTTP Requests to external services.

Active
Activate Webhook.

Name*
Alarm-SMS
Enter a name for the Webhook.

URL*
https://10.15.30.3/api/sms-gateway
Enter here the url which is used for the request. ATTENTION: Some parameters have to be ...

HTTP-Method
PUT
Choose here the correct HTTP-Method for the request.

Authentication
Bearer Token
Choose here, if the request needs an authentication.

Bearer Token
ADJJMeIHJ8utv6IEBmbwhOcqYsA6fsodD0koGvgV
Enter here the bearer token for authentication.

Content-Type
application/json
Choose here the Content-Type (MIME-Type) of the requests data.

Data

```
{
  "key": "password",
  "recipients": [
    "+491751209711", "+4915753654522"
  ],
  "body": "In der Zone $GROUP_NAME$ ist beim Sensor $DEVICE_NAME$ ein $ACTIVE_ALARM_SENSOR_NAME$-Alarm aufgetreten, Messwert: $ACTIVE_ALARM_MEASUREMENT_VALUES$"
}
```

Enter here the data which should be send.

[Check Webhook](#)

Webhook-Konfiguration zur Ansteuerung des SMS-Gateway beim AlarmManager