

Grundfunktionen SmartXcan

The device is connected to a network socket or a PoE-capable switch via a patch cable (included in the scope of delivery). If no PoE connection is available, a so-called PoE injector can be used (see [Stand-Alone Operation](#)).

After connection to the power supply, the device needs approx. 1 minute to start the software and a further time (warm-up phase) until the IR sensor is ready for measurement. This warm-up time depends on the ambient temperature and is indicated by a RED flashing light effect on the LED light ring. The LED goes out as soon as the unit is ready to measure.



Verbindung mit PC



Connect the LAN socket of the SmartXcan to a PoE-enabled switch via a LAN cable. Also establish a network connection between your PC and this switch. Set the IP address of your PC to e.g. "192.168.100.123" and you can access the SmartXcan via the web interface at **192.168.100.223**

On this page you will find the following information:

- [Webinterface \(without login\)](#)
- [Dashboard](#)
- [SmartXcan configuration](#)
 - [General](#)
 - [Security](#)
 - [Privacy](#)
 - [Body temperature](#)
 - [Acoustic Signaling](#)
 - [Location](#)
 - [Import/Export configuration](#)
- [Extended multisensor configuration](#)
 - [Alarm Values](#)
 - [External Sensors](#)
 - [Switching Outputs](#)
 - [Webhooks](#)

Webinterface (without login)

If you have connected the SmartXcan to your network, you can reach it at the above address. This will take you to the web interface. The web interface of the SmartXcan shows a simple interface with two central areas:

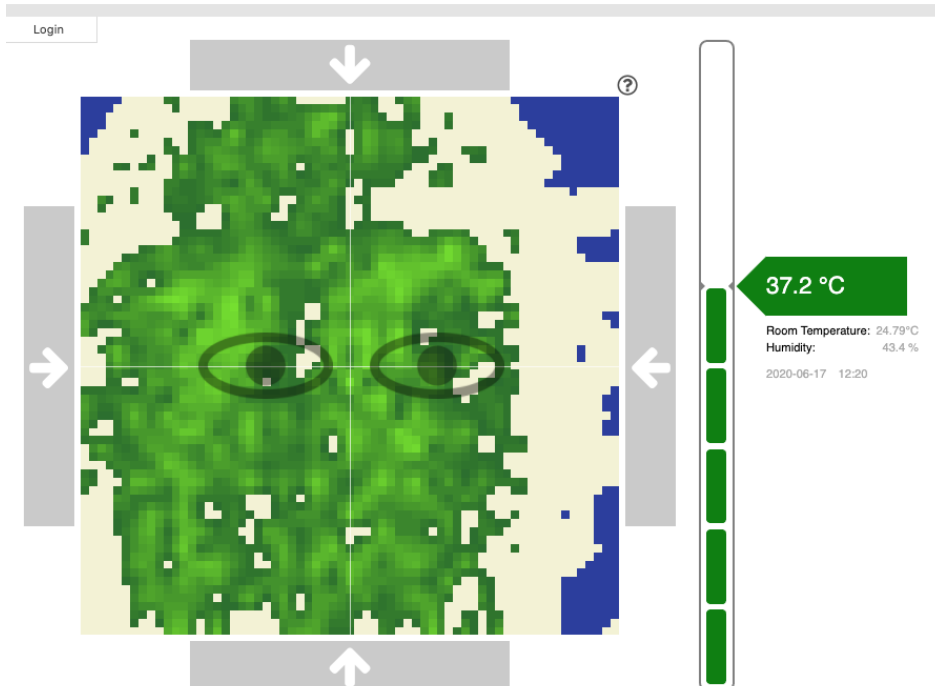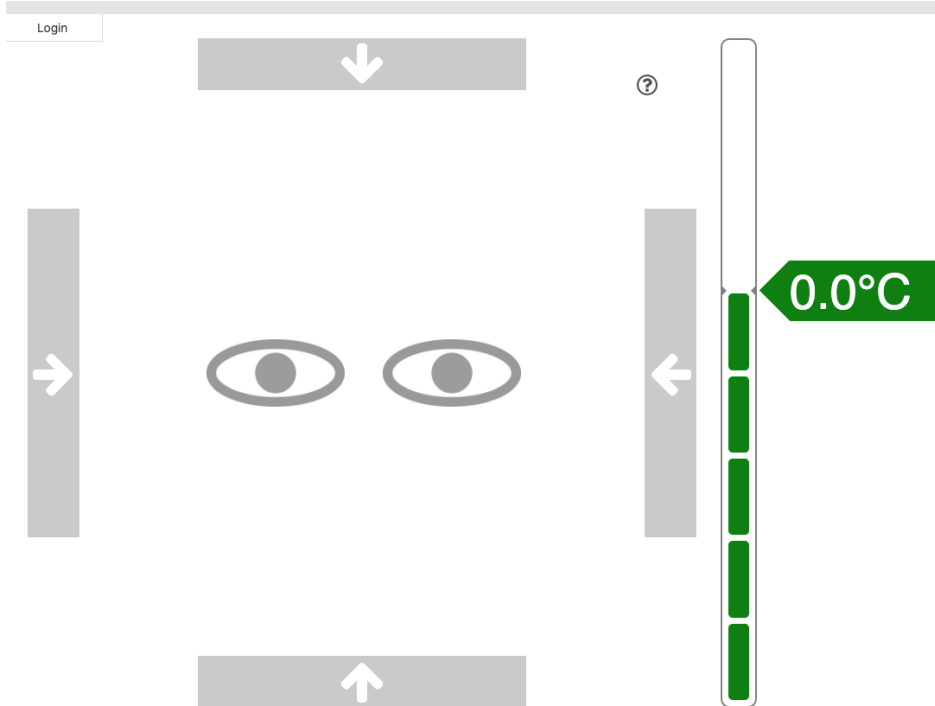

The left area shows face as thermal image. On the right side is a LED scale as seen on the SmartXcan. Here the measured temperature can be read directly.
The data is updated automatically. In the upper left corner below the logo there is the LOGIN button for system login and configuration.

Dashboard

The following data are required to log in to the user interface: **Username: admin, Password: password**

The dashboard displays general SmartXcan readings such as room temperature, relative humidity and dew point.



Dashboard

Sensors

Users

Configuration

System

Logout

Dashboard TI-Sensor Event Logbook

System State

Kentix MultiSensor SmartScan - EG

Sensor	Value	Alarm
Room Temperature	21.8 °C	✓
Humidity	37.0 %	✓
Dewpoint	6.5 °C	✓
Vibration	✗	✓
Digitaler Eingang 1	Open	✓
Digitaler Eingang 2	Open	✓

SmartXcan configuration

Dashboard

Sensors

Users

Configuration

System

Docs

Logout

SmartXcan MultiSensor

General

Warmup Behavior
Block measurements

Manual Measure Start
Off

Measurement Distance
30 cm

Emissivity
0,98

Security

Primary Login
Off

Tamper Protection
On

Sensitivity
Low

Privacy

Logging
All (incl. Userdata)

Remove user related data after
Store all

Body Temperature

Min. Object Temperature at (°C)
28

Normal at (°C) 35	Instruction Normal body temperature detected
Raised level 1 at (°C) 37,9	Instruction Raised body temperature level 1 detected
Raised level 2 at (°C) 38,4	Instruction Raised body temperature level 2 detected
Raised level 3 at (°C) 39,4	Instruction Raised body temperature level 3 detected

Body Core Temperature Correction
2,0

DTC (Dynamic Temperature Correction)
Medium

Acoustic Signaling

Signaling Mode
Pulsating

Signaling Duration
3 Seconds

2020.12.15 08:25

General

The emissivity of the device is shown under General. This cannot be changed. The warm-up behaviour of the SmartXcan has two options. The warm-up duration depends on the ambient temperature. During this time the measurement results are less accurate. It can be set whether a temperature measurement is permitted during this phase.

For the manual measurement start it can be varied whether the measurement is first activated and started by an external command.

Security

The upstream login option means that the SmartXcan interface with the measured temperatures and scales can only be accessed after a successful login.

To prevent manipulation of the measurement, the SmartXcan detects foreign objects such as hands, glasses or an incorrect head position. The manipulation protection of SmartXcan is divided into two levels:

- Low: The head must be correctly positioned to start the measurement
- High: In addition to the positioning of the head, an eye recognition is performed

Note: If the tamper protection is activated, the measuring process is automatically extended because several additional processes are executed!

Privacy

Here you can adjust which values are stored in the event logbook.

Body temperature

In this field you can define the four different body temperature ranges. These temperature levels can optionally be assigned instructions for action, which can be recognized by the user or supervisor.

The body core temperature correction value is the value which is added to the measured skin surface temperature to determine the body core temperature. The dynamic-temperature-correction automatically adjusts the value of the body temperature when the face has cooled down considerably. You can find more information about DTC here: [What is Dynamic Temperature Correction \(DTC\)?](#)



During the cold winter months the DTC function should be changed to **high**!

Acoustic Signaling

The type and duration of the alarm signal of a measurement with increased temperature can be set as required. A distinction must be made between a continuous or a pulsating signal. The duration can be selected between min. 1 second and max. 1 hour.

Location

Location-specific information can be entered here. This information is also displayed in the web interface.

Import/Export configuration

Ready-made device configurations can be loaded or exported here.

Extended multisensor configuration

- Dashboard
- Sensors
- Users
- Configuration
- System
- Docs
- Logout

SmartXcan
 MultiSensor

Alarm Values

Room Temperature	Min (°C)	Max (°C)	Offset (°C)
<input type="text" value="Off"/>	<input type="text" value="10"/>	<input type="text" value="30"/>	<input type="text" value="0"/>
Humidity	Min (%)	Max (%)	
<input type="text" value="Off"/>	<input type="text" value="10"/>	<input type="text" value="80"/>	
Dewpoint	Hysteresis (°C)		
<input type="text" value="Off"/>	<input type="text" value="2"/>		
Vibration	Sensitivity		
<input type="text" value="Off"/>	<input type="text" value="Low"/>		

System Port

Digital Input 1	Name	Alarm if
<input type="text" value="Off"/>	<input type="text" value="DI1"/>	<input type="text" value="Closed"/>
Digital Input 2	Name	Alarm if
<input type="text" value="Off"/>	<input type="text" value="DI2"/>	<input type="text" value="Closed"/>
Digital Output 1	Name	Switching Duration
<input type="text" value="Raised body temperat..."/>	<input type="text" value="DO1"/>	<input type="text" value="2"/> ✓
Digital Output 2	Name	Switching Duration
<input type="text" value="Normal body temperat..."/>	<input type="text" value="DO2"/>	<input type="text" value="2"/> ✓

Webhooks

	#	Name	Alarm Assignment		
<input type="checkbox"/>	1	WebhookTest	Temperature alarm		

Alarm Values

In this area of the multi-sensor, thresholds for additional sensors can be configured. The Kentix SmartXcan measures the body core temperature, room temperature, relative humidity and dew point.

External Sensors

In this area the digital inputs can be configured. For this a [KIO3-adapter](#) must be connected to the system port of the SmartXcan. For the inputs you can then realize the function of a manual measurement start.

Switching Outputs

Two channels are available to perform external switching outputs. For example, an output can be switched for any duration at a normal body core temperature.

Webhooks

Webhooks can be used to activate certain commands in case of different events (body temperature normal). For example, a doorlock DC can be activated if the fever measurement shows a normal temperature. Further information can be found in the [API section](#).