

KeyPad-Touch - MANUAL (ARCHIVE)



Legacy product

This product is no longer available. The documentation is still available as an archive.

ORDER-CODES:

KKPT

The KeyPad is used to arm-disarm the AlarmManager on site. Like the MultiSensors, the KeyPad keyboard is integrated into the ZigBee© wireless network of the AlarmManager. Note, however, that the keyboard does not work as a router and cannot affect the range of the network.

The KeyPad turns on when any key is pressed. The maximum operating time is then approx. 10 seconds. Within this time, an assigned alarm zone can be armed or disarmed.

Safety instructions

Installation

Installation and commissioning may only be carried out by trained specialist personnel in accordance with the instructions.

No modifications of any kind may be made to Kentix GmbH products, with the exception of those described in the relevant instructions.

When installing Kentix devices, certain degrees of protection must be guaranteed.

Observe the relevant regulations for installations in the respective environment.

Only operate the products within the defined temperature range.

The instructions should be passed on to the user by the person carrying out the installation.

Kentix accepts no liability for damage to the devices or components caused by incorrect installation. Kentix accepts no liability for incorrectly programmed units.

Kentix accepts no liability for faults, material damage or other damage.

Use of the products, transport and storage

Protect the device from

moisture, dirt and damage during transportation, storage and operation.

Battery powered products

Do not use the products in potentially explosive atmospheres.

Only operate the products within the defined temperature range.

Installation and battery replacement may only be carried out by trained specialist personnel in accordance with the instructions.

Do not charge, short-circuit, open or heat batteries.

Observe the correct polarity when inserting the batteries.

The devices must always be operated with the batteries intended for the product.

When changing the batteries, always replace all batteries.

Dispose of old or used batteries properly.

Keep batteries out of the reach of children.

Maintenance

Kentix devices must be checked for functionality as part of annual maintenance.

Disposal

Electrical appliances and batteries must be disposed of separately from household waste.


Controls

Front



KeyPad touch front

Key layout

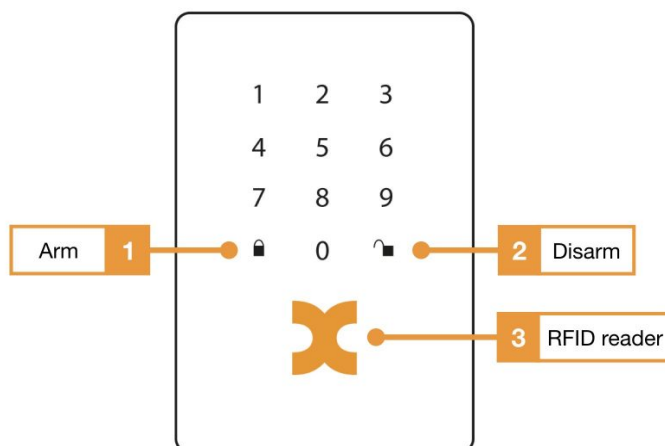


KeyPad touch key layout

1. Arming – Exit room
OK: 5 seconds acoustic signal (on/off), LED for arming flashes green , MultiSensors signal acoustically according to the set delay time.
Not OK: 3 seconds acoustic signal (on/off), LED for arming flashes red
2. Disarming – enter room

- OK :1 second continuous acoustic signal on KeyPad and MultiSensors, LED lights up continuously
3. RFID reading range: Hold the RFID card as centered as possible on the reader. The function is executed immediately after the correct reading.

Internal controls

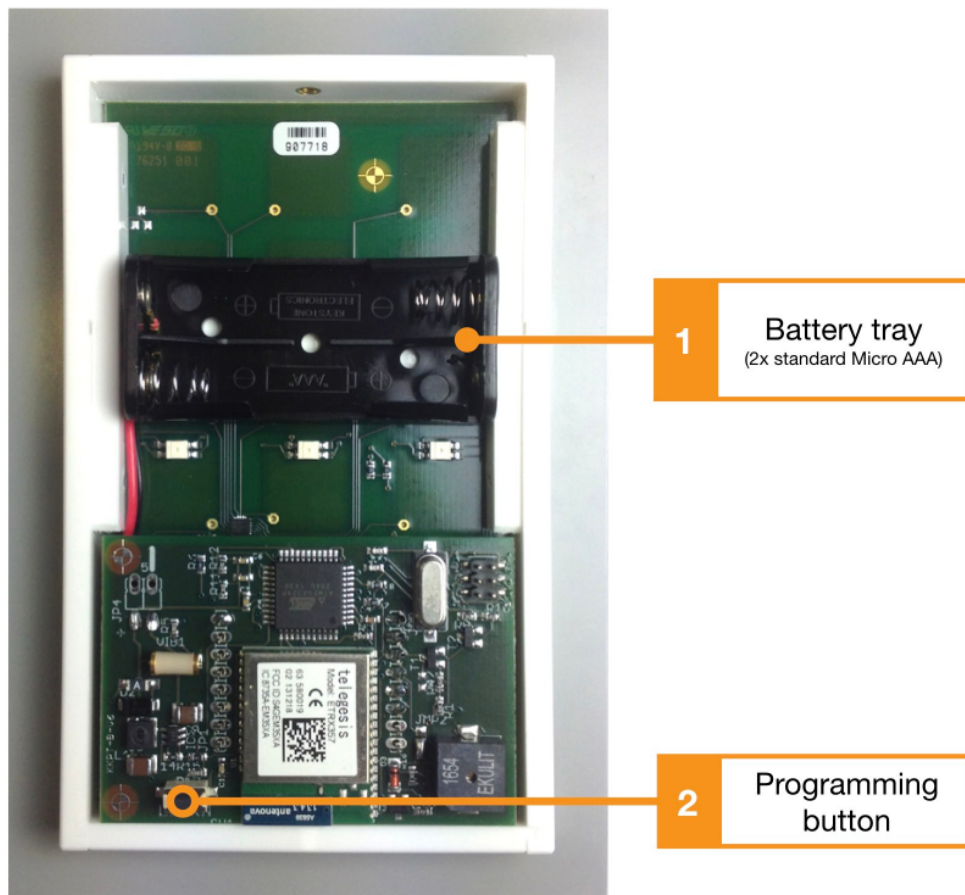

1. Battery compartment: two AAA 1.5 V batteries are required to operate the device
2. Teach-in key: This key is used to teach the device into the wireless network. To teach-in the sensor in KentixOne, start the teach-in process and then press the teach-in button for 3sec. Press until a signal tone is heard

Connect with WLAN

To add a KeyPad touch to KentixOne, select “+” in the Alarm Zones heading area of the Dashboard, then select “MultiSensor (Wireless)”.

Press the teach-in button for 3 seconds, which you reach via the recess on the back of the

housing (2), until an acoustic signal sounds

The sensor should be detected within 15-20 seconds. The configuration mask for the sensor is then opened directly. The teach-in process is now complete

Operation via RFID

To operate the KeyPad by means of an RFID card, this can be used instead of the 4-digit PIN for authentication.

To do this, activate the KeyPad and then hold your RFID card in front of the X.

Only “armed-active” alarms can be switched via the KeyPad keypad.

Alarms of the type “Permanent active” are executed / signaled unaffected by the armed-disarmed state of the AlarmManager or the alarm zone.

Teach-in user / RFID cards

New RFID cards are read in via the user configuration in KentixOne on a KeyPad.

Configuration with KentixONE

The device is configured via the web browser in KentixONE. The device must be accessible to the central KentixONE instance on the network side. Depending on the device type, a communication key and the IP address or DHCP name of the central KentixONE instance must also be set on the device (MultiSensors, AccessManager, SmartPDU). IP cameras or IO modules, on the other hand, can be integrated directly into KentixONE.

All information about the software can be found in the [KentixONE](#) section and the associated documentation.

Before starting the configuration, make sure that the software on all network-compatible Kentix devices is up-to-date. The version status must match on all devices.

You can perform a software update for your KentixONE main instance and all connected satellites at any time via “System - Update”.