


Temperature sensor for expansion module (Ethernet) - MAUNAL

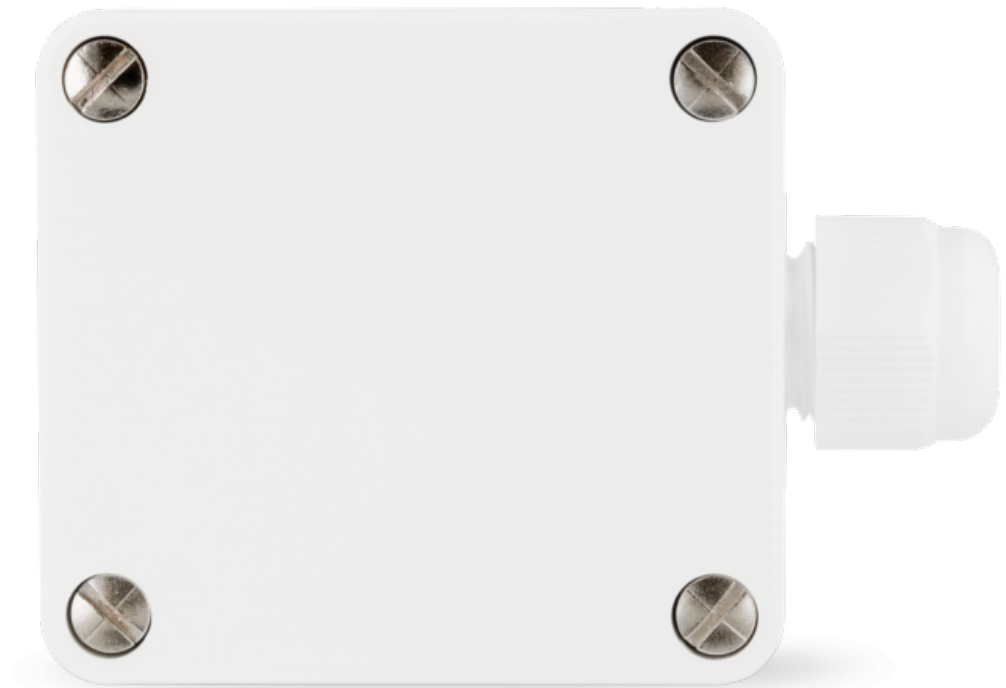

ORDER-CODES:

[KESAN1](#), [KESAN2](#)

[DATASHEET EXTERNAL TEMPERATURE SENSOR](#), [Quick Start Guide](#)

Overview

The temperature sensor, with active current and voltage output, is used to measure the temperature in outdoor areas or damp/cold rooms. For this purpose, 4 selectable temperature ranges (-50°C...+50°C; 0°C...+50°C; 0°C...+100°C; 0°C...+160°C) are available. The connection is made to the expansion module (Ethernet) ORDER-CODE: KIO7017 with analog inputs.

Safety instructions

Installation

Installation and commissioning may only be carried out by trained specialist personnel in accordance with the instructions.

No modifications of any kind may be made to Kentix GmbH products, with the exception of those described in the relevant instructions.

When installing Kentix devices, certain degrees of protection must be guaranteed.

Observe the relevant regulations for installations in the respective environment.

Only operate the products within the defined temperature range.

The instructions should be passed on to the user by the person carrying out the installation.

Kentix accepts no liability for damage to the devices or components caused by incorrect installation. Kentix accepts no liability for incorrectly programmed units.

Kentix accepts no liability for faults, material damage or other damage.

Use of the products, transport and storage

Protect the device from

moisture, dirt and damage during transportation, storage and operation.

Battery powered products

Do not use the products in potentially explosive atmospheres.

Only operate the products within the defined temperature range.

Installation and battery replacement may only be carried out by trained specialist personnel in accordance with the instructions.

Do not charge, short-circuit, open or heat batteries.

Observe the correct polarity when inserting the batteries.

The devices must always be operated with the batteries intended for the product.

When changing the batteries, always replace all batteries.

Dispose of old or used batteries properly.

Keep batteries out of the reach of children.

Maintenance


Kentix devices must be checked for functionality as part of annual maintenance.

Disposal

Electrical appliances and batteries must be disposed of separately from household waste.

Controls

Device view

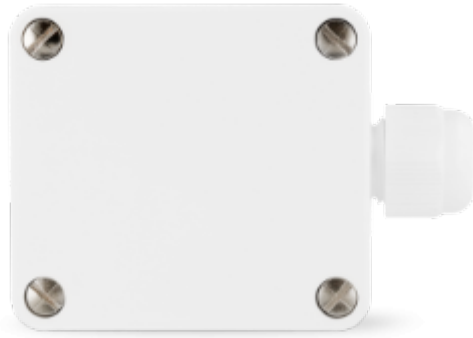


TYPE: KESAN1



TYPE: KESAN2

Wiring diagram board

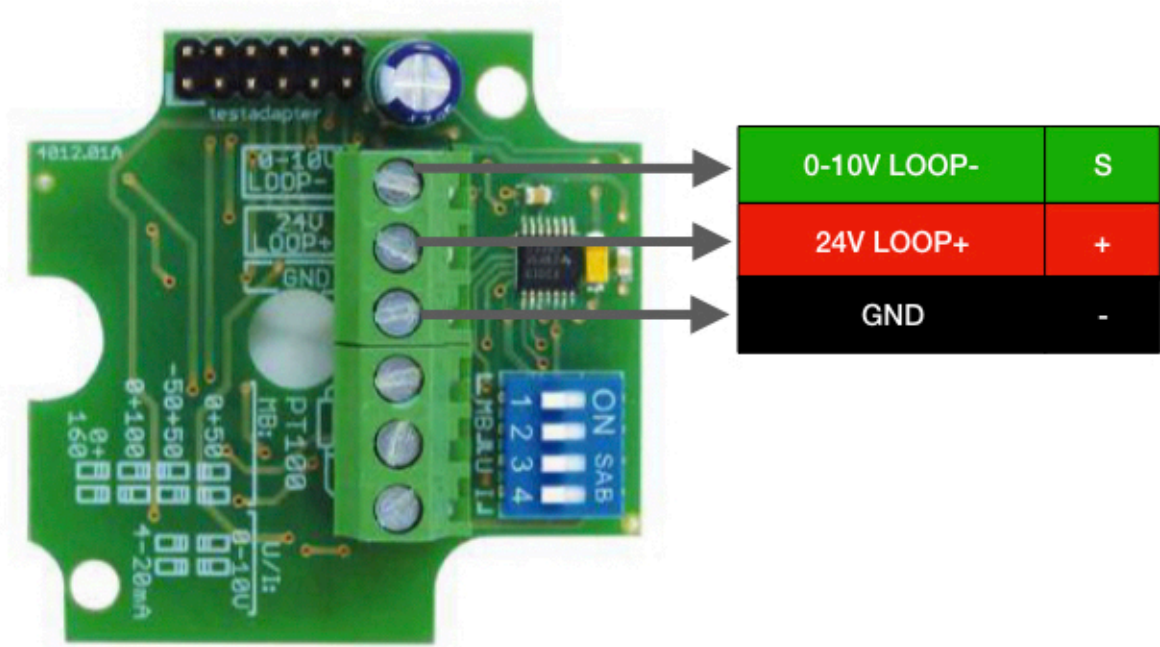


Connections and DIP switches with open housing

Note the printed DIP switch positions for setting the temperature range:


DIP switch	DIP position	Measuring range
1 + 2	OFF + OFF	0 to +50°C (default)
1 + 2	OFF + ON	-50 to +50°C
1 + 2	ON + OFF	0 to +100°C
1 + 2	ON + ON	0 to +160°C
3 + 4	OFF + OFF	0 - 10V Output voltage (default)
3 + 4	ON + ON	4 - 20mA Output current

Connection diagrams


Wiring diagram voltage output

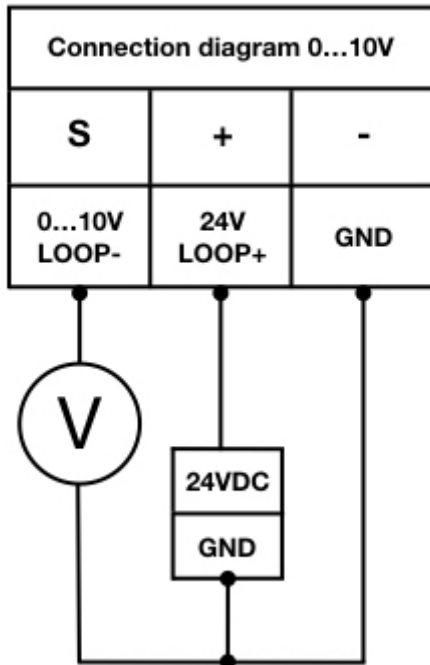

Wiring diagram current output

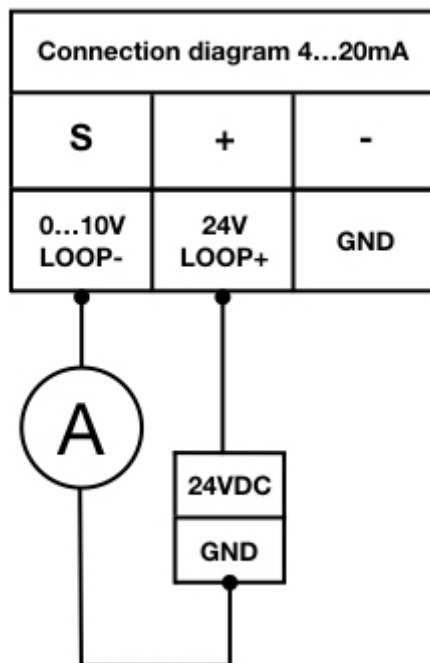

Connection example with 2 temperature sensors (KESAN1 or KESAN2) on extension module KIO7017 with power supply via PoE splitter (24VDC)

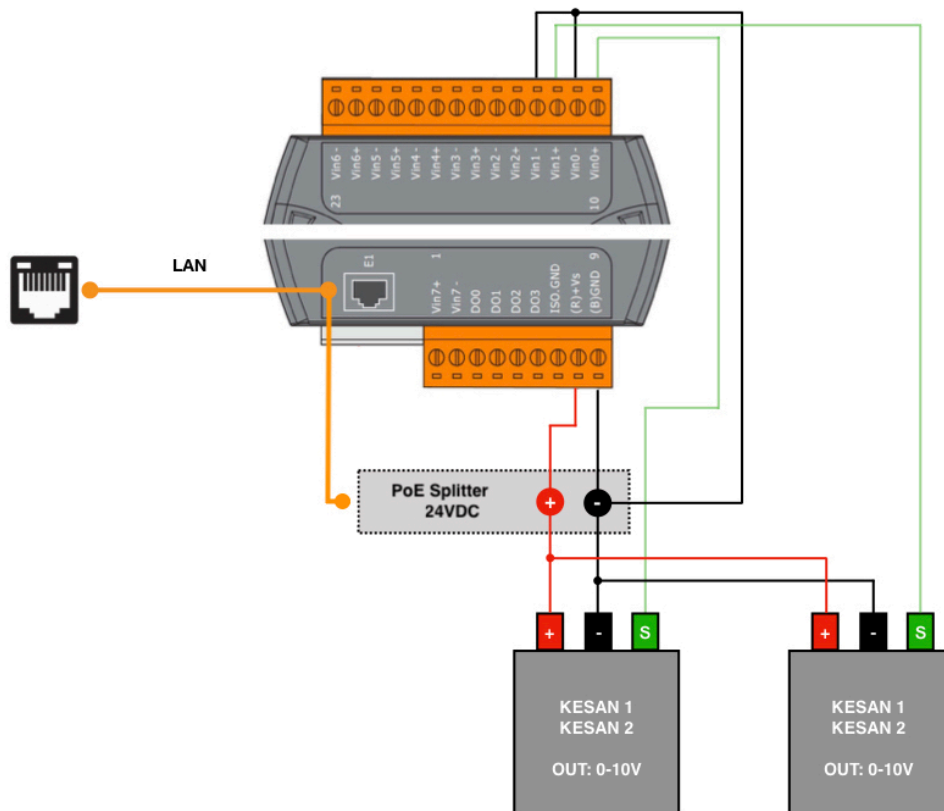

The voltage output of the PoE splitter supplies both the KIO7017 module and the two KESAN1/2 sensors with voltage. Note the performance data of the PoE splitter (min. PoE Class 3) and its general operation. We recommend to set 24VDC as output voltage at the PoE splitter if possible.

Note that this is an example of a simple connection variant and other variants are possible. Thus, power supplies, DC/DC converters, etc. can be used instead of the PoE splitter. For further details refer to the wiring options of the expansion module [KIO7017](#). **IMPORTANT!** Electrical engineering expertise is required for the connection and proper installation of the entire system!

Configuration with KentixONE

The device is configured via the web browser in KentixONE. The device must be accessible

to the central KentixONE instance on the network side. Depending on the device type, a communication key and the IP address or DHCP name of the central KentixONE instance must also be set on the device (MultiSensors, AccessManager, SmartPDU). IP cameras or IO modules, on the other hand, can be integrated directly into KentixONE.

All information about the software can be found in the [KentixONE](#) section and the associated documentation.

Before starting the configuration, make sure that the software on all network-compatible Kentix devices is up-to-date. The version status must match on all devices.

You can perform a software update for your KentixONE main instance and all connected satellites at any time via “System - Update”.